

Wi-Fi Configuration


Ingenico® Desk/Move




GPRS and Wi-Fi (Telium TETRA)

GPRS devices need Wi-Fi for downloads

Quick Reference Guide Supplement

After a download, or whenever the Wi-Fi  icon is not green, locate your Wi-Fi network name and security information and configure your terminal by following these steps:

1. Press the **Home**  key, and if the **Admin Mode** option is available, select it, and then enter the password when prompted.
2. Select **Tetra Admin** > **Configure Wi-Fi** > **My Networks** > **Delete All**.
3. When the menu displays, select **Scan Networks**, and then select your network from the list.
4. Follow the prompts to provide the security information needed to connect to your network.
5. When the Wi-Fi icon appears green, select **User Mode**, and then press **Cancel** to return to the terminal's idle prompt.